
## ADJUSTMENT ON GAME PC BOARD\* (HELLFIRE \*G25 00517A)

CONNECTOR

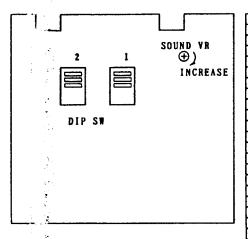

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	В	2	GND
+5V	С	3	+5V
+5 V	D	4	+5Y
	E	5	
+12V	F	6	+12V
POST	H	7	POST
COIN COUNTER 2	J	- 8	COIN COUNTER 1
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1
SPEAKER (-)	L	10	SPEAKER (+)
	M	11	
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
	S	15	TEST SW
(COIN 2)	T	16	COIN 1
2P START	Ü	17	1P START
2P UP	V	18	1P UP
2P DOWN	-	19	1P DOWN
2P LEFT	X	20	IP LEFT
2P RIGHT	Y	21	1P RIGHT
2P SHOT BUTTON	Z	22	1P SHOT BUTTON
2P DIRECTION BUTTON	а	23	1P DIRECTION BUTTON
	Ь	24	
	С	25	
	d	26	
GND	е	27	GND
GND	f	2.8	GND

↑ THE CONTROL OF THIS GAME USES

(\*\*\* 8-WAY JOYSTICK AND 2 BUTTONS.

(OTE) JEFORE CHANGING THE SETTINGS OF THE DIP SWITCH, TURN THE POWER OFF.

## > SETTING OF DIP SWITCH 1

(\*) : FACTORY SETTINGS

STING			POS	NOITIE	1	2	3	4	5	8	7	8
TABLE				OFF								
G VE STYLE	UPRIGHT				ON	1						
S EEN ROTATION	* NO	DMAL				OFF	]					
. VEEN VOIVIION	RE	EVERSE	:			ON	1					
∴§T MODE	* NO	DMAL (	AME	E			OFF	]				
	TE	EST MO	DE				ON					
RACT SOUND *	* 71	ITH						OFF				
	77 ]	ITHOUT	Γ					ON				
i i	* 1 CO	DIN	1	PLAY					OFF	OFF		
P'AY PRICING	2 CO	DINS	1	PLAY					ON	011		
COIN 1	3 CC	OINS	1	PLAY					OFF	ON	]	
	4 CC	OINS	1	PLAY					ON	UN		
•	* 1 CO	DIN	2	PLAYS							OFF	OFF
TY PRICING	1 CO	NIO	3	PLAYS							ON	U11
COIN 2	I CO	NIO	4	PLAYS	]						OFF	ON
3	1 CO	DIN	8	PLAYS							ON	UN

> SE YING OF DIP SWITCH 2

SITING	POSITION	1	2	3	4	5	6	7	8
G JE DIFICULTY F ;Y (A) → S.DIFICULT (D)	* RANK B	OFF	OFF						
	RANK A	ON OFF						1	1
	RANK C	OFF		1		}			
	RANK D	ON	ON						
;	* 70.000/200,000PTS.				055	1			
US POINTS	100,000/250,000PTS.			ON	OFF			1	
y 1 UP	IOO.OOO PTS. ONLY			OFF	0.11	1			
<u> </u>	200,000 PTS. ONLY			ON	ON			İ	
*	* 3					OFF	OFF	1	
BER OF PLAYER	1					ON	ן יייי		
	2					OFF	ON		
	5			•		ON	UN		
ne alt	NOMAL GAME							OFF	
	* NO HIT							ON	
TINUED PLAY	* WITH								OFF
TINGED LENT	TUOHTIW								ON